



VENISE

abacus components


Sofa high armrests depth 1000 - 39 ¼"




Sofa low armrests depth 1000 - 39 ¼"




End unit high armrest depth 1000 - 39 ¼"

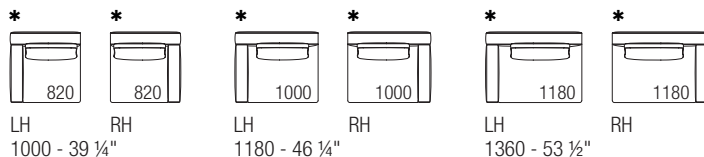


* end or corner unit

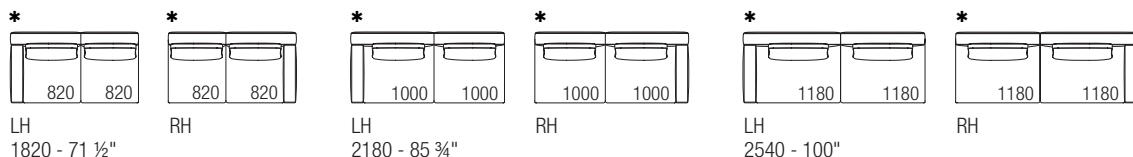


Trapezium end unit high armrest depth 1000 - 39 ¼"

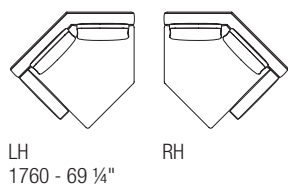



Curved end unit high armrest depth 1000 - 39 ¼"

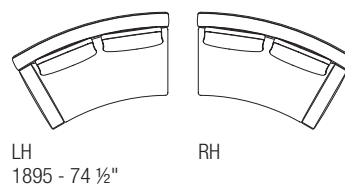


Drop-shaped end unit high backrest depth 1000 - 39 ¼"

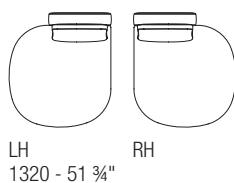


End unit low armrest depth 1000 - 39 ¼"

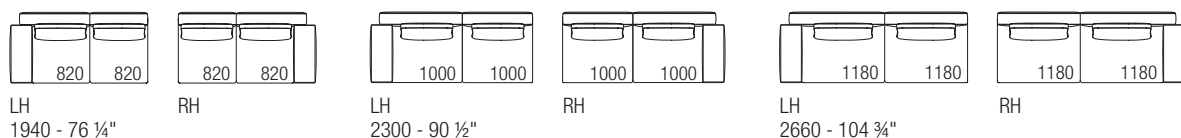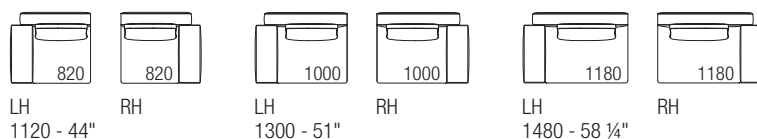

Trapezium end unit low armrest depth 1000 - 39 ¼"

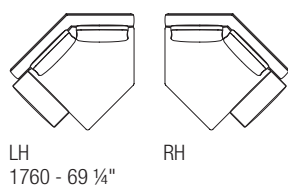


Curved end unit low armrest depth 1000 - 39 ¼"

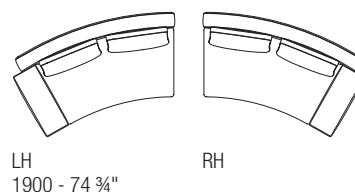


VENISE

abacus components

Central unit depth 1000 - 39 ¼"




Trapezium central unit depth 1000 - 39 ¼"

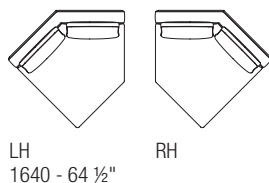


Curved central unit depth 1000 - 39 ¼"




Corner unit 45°/90° depth 1000 - 39 ¼"

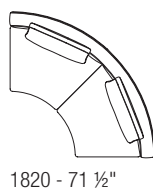


Dormeuse end unit high armrest depth 1360 - 53 ½"

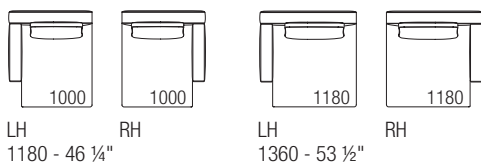


Dormeuse end unit high armrest depth 1700 - 66 ¾"

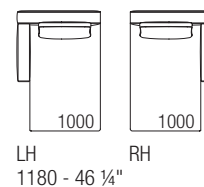


Dormeuse end unit low armrest depth 1360 - 53 ½"

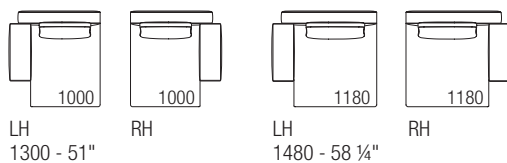


Dormeuse end unit low armrest depth 1700 - 66 ¾"

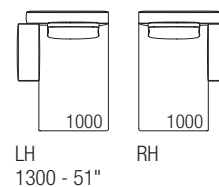


Central dormeuse depth 1360 - 53 ½"

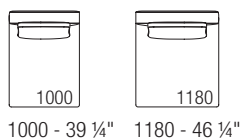


Drop-shaped dormeuse high armrest depth 1500 - 59 ¼"

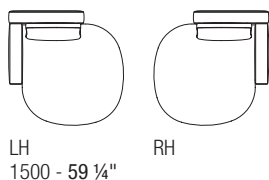


Drop-shaped dormeuse low armrest depth 1500 - 59 ¼"

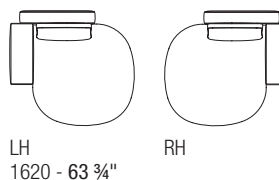


Pouf depth 1000 - 39 ¼"




Pouf depth 1000 - 39 ¼"




Pouf depth 1360 - 53 ½"



Drop-shaped pouf depth 1320 - 51 ¾"



Additional cushion




VENISE

Venise coffee table code AF011 to replace the armrest




The Venise coffee table with a depth of mm 800 - 31 1/2" can also be used to replace the armrest, both in the widths of mm 300 - 11 3/4" or mm 180 - 7". In that case, you have to consider that the coffee table has a width of mm 360 - 14 1/4" and therefore, the overall dimension of that sofa will increase.

Widths with armrest

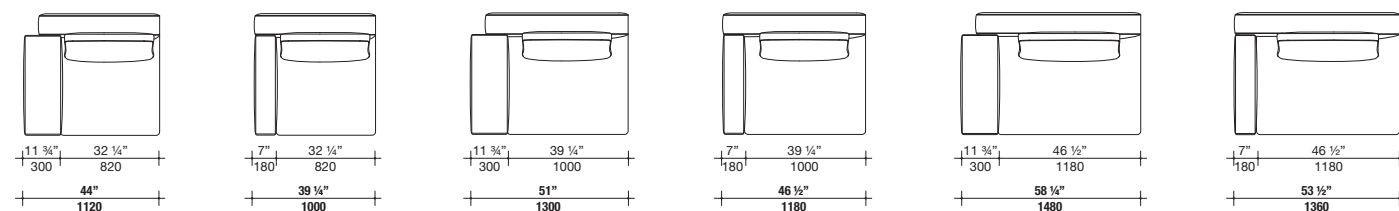


Widths with coffee table AF011

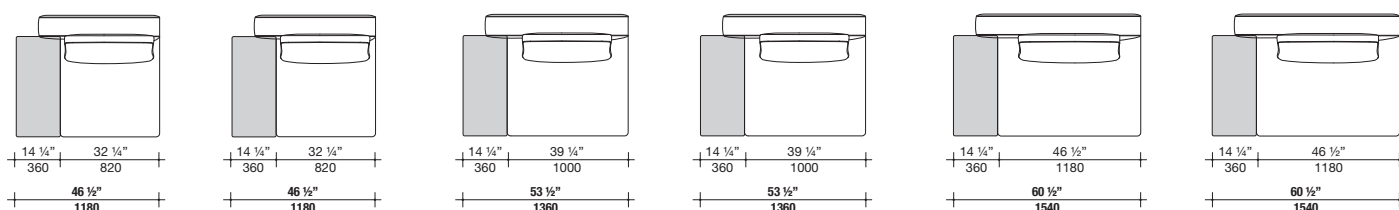


The coffee table, differently from the armrest, is never hooked to the sofa but is next to it and can be on the side or central, between several elements.


LH coffee table

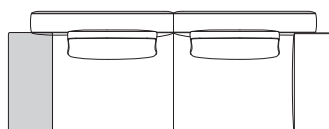


RH coffee table

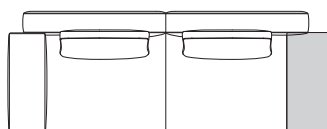

LH and RH coffee table

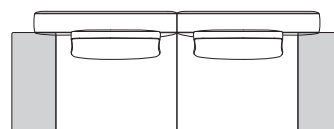


Central coffee table

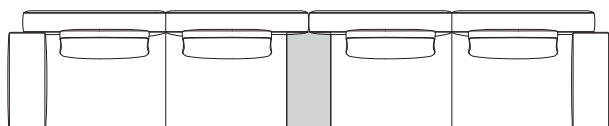


VENISE

Venise coffee table code AF011 to replace the armrest - abacus components


Sofa
without armrests
depth 1000 - 39 ¼"




End unit
without armrest
depth 1000 - 39 ¼"

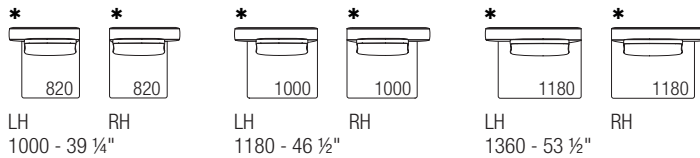


* end or corner unit

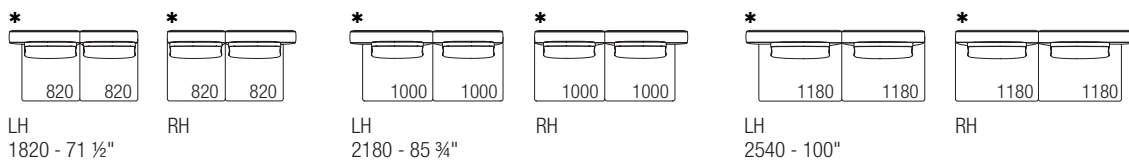


Trapezium end unit
without armrest
depth 1000 - 39 ¼"

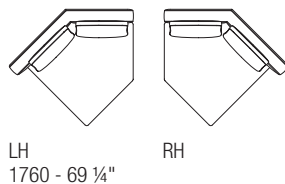


Curved end unit
without armrest
depth 1000 - 39 ¼"

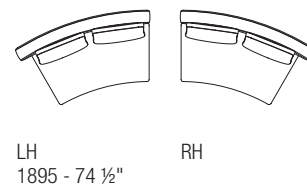


Dormeuse end unit
without armrest
depth 1360 - 53 ½"

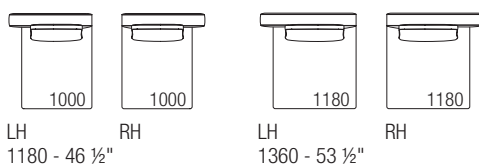

Dormeuse end unit
without armrest
depth 1700 - 66 ¾"

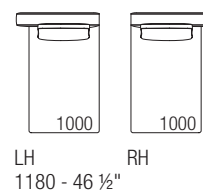


Drop-shaped dormeuse
without armrest
depth 1500 - 59 ¼"

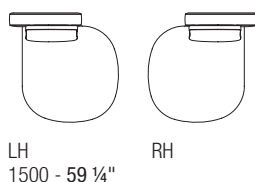

High armrest H. 630
depth 820 - 32 ¼"





Low armrest H. 530
depth 820 - 32 ¼"



VENISE

Venise coffee table code AF011 to replace the armrest - price calculation method

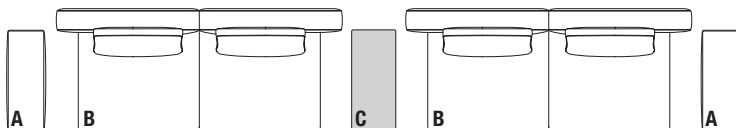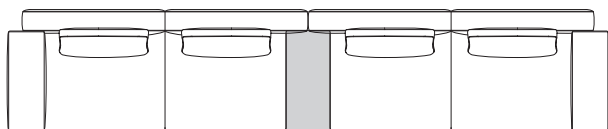

- no. 2 low armrests **(A)** H. 530 - 20 ¾" code **LS1110**
- no. 2 sofas without armrests **(B)** code **LN2910**
- no. 1 Venise coffee table **(C)** code **AF011**

A + B + C + B + A = total